



GEN - 2 KEY PAD / CONTROL PANEL

KEY PAD FOR WIRELESS REMOTE MOTORS ONLY:

When you plug the motor in the ready light will be a solid green. The blue light will continue to blink until you pair a phone with it. When a phone is paired to the unit, the blue light will stay solid. When you press any button on the key pad the status light will blink red.

After a set amount of time, the key pad will go into a sleep mode. Simply press any button and let go to take it out of sleep mode.

*If there are any issues, unplug the unit from power for 2 minutes to reset it.

KEY PAD FOR AUTOSTOP MOTORS ONLY: (Will say Autostop)

When you plug the motor in the ready light should be a blinking green. (Unless you already set up the Autostop) The blue light will continue to blink until you pair a phone with it. When a phone is paired to the unit, the blue light will stay solid. When you press any button on the key pad the status light will blink red. When you have both autostop limits set, the green ready light will stay solid. To set limits on an autostop motor, please refer to the Autostop instruction guide.

After a set amount of time, the key pad will go into a sleep mode. Simply press any button and let go to take it out of sleep mode.

*If there are any issues, unplug the unit from power for 2 minutes to reset it.

LOCKING AND UNLOCKING THE KEY PAD (Same on all motors):

Hold the lock/unlock button until the ready and status light start blinking together (10-15 seconds) to lock the key pad. Hold it again until the ready and status light stop blinking to unlock the key pad. When the key pad is locked the lights will blink for a set amount of time and then stop. Remote controls will not work when the key pad is locked. Bluetooth will still work.

*If you press any button and the status and ready light blink this means the key pad is locked. The blue light will blink unless a phone is paired. Then the blue light will be solid.



CANOPY LIGHT
ON / OFF

LOCK / UNLOCK

